



INSTALLATION INSTRUCTIONS

**BMW 528i, 540i, (1997-2001)
530i (2001)**

PART NUMBER: BM-51-97

**VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM**

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM™.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.


TOOLS REQUIRED: Hook tool , #2 Phillips screwdriver.

PARTS INCLUDED: Pro.Fit VSM™, instructions.

LOCATION: To the right of the radio.

STEP 1.

Begin by removing the wood grain trim panel that is to the right of the radio and above the glove box. To do this: **Carefully** Insert your hook tool in behind the trim panel approximately 2" inch from the left end of the panel on the top side. **Carefully** pull back toward you to release the first clip. Once the first clip is released continue working the panel loose to the right, releasing three (3) more clips. Set trim panel aside.

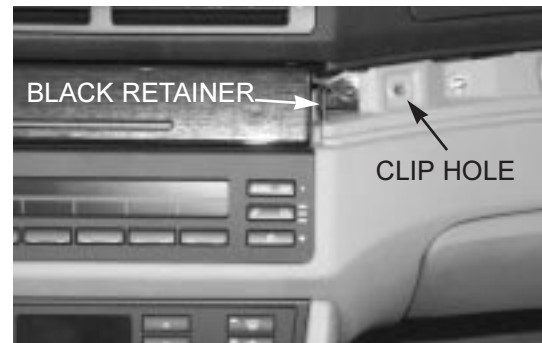

STEP 2.

After the trim panel is removed, you will see four (4) Phillips screws. Remove the first Phillips screw to the right of the radio using your #2 Phillips screwdriver. **NOTE: On some models there will be a black plastic retainer under this screw. Remove the retainer and place it in the glove box. The retainer will not be used in the installation of the Pro.Fit VSM™. Please inform the customer of its whereabouts.** Install the phone holder onto the Pro.Fit VSM™. Align the hole in the Pro.Fit VSM™ with the screw hole and insert the factory screw. Tighten down the mount with your #2 Phillips screwdriver.



STEP 3.

Carefully replace the wood trim panel securing all clips.

This completes the installation of your Pro.Fit VSM™.



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM™. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation.

Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

Web Address: www.pro-fit-intl.com

© Pro.Fit International, Eagan, MN 2002